



## ALARM CLOCK RADIO

USER MANUAL



AFTER SALES SUPPORT

☎ AUS 1300 777 137 EMAIL [service@unclebills.com.au](mailto:service@unclebills.com.au)

Contents

General Information and Safety Instructions	03
Product Overview	06
Getting Started	08
Instructions	09
Frequently Asked Questions	15
Other Useful Information	16
Warranty Information	18

## General Information and Safety Instructions

Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



*This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.*



*The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.*

1. Before using the Alarm Clock Radio, ensure the electrical voltage and circuit frequency correspond to the voltage stated on the rating label of your product and your power outlet is properly earthed.
2. Do not use the Alarm Clock Radio with an extension cord unless this cord has been checked and tested by a qualified electrician. If an extension cord is used, please ensure that it has a rating equal or exceeding the rating of this product.
3. Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners.
4. Check the power cord regularly for visible damage. If it is damaged, please contact the After Sales Support line for further advice.
5. When the Alarm Clock Radio is not in use, switch it off and unplug from the power outlet. Do not leave the product unattended when connected to the power supply. To unplug, grip the plug and pull from the power outlet. Never pull by the cord.

### AFTER SALES SUPPORT

**AUS** 1300 777 137 **EMAIL** [service@unclebills.com.au](mailto:service@unclebills.com.au)

# General Information and Safety Instructions (cont)

6. Do not attempt to open any part of the Alarm Clock Radio, except the battery compartment. This will void the warranty.
7. This product is not user-serviceable. Contact with high voltage components may cause a risk of electric shock. Do not attempt to repair, disassemble or open any part of the Alarm Clock Radio except the battery compartment.
8. The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical devices. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the device. See your qualified electrician for professional advice.
9. This Alarm Clock Radio is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
10. Never block the ventilation holes and openings found on the top of the Alarm Clock Radio. These ventilation holes have been specifically included in the design of the device to assist the product to cool down and to prevent overheating. Do not place this product against soft surfaces, drapery or fabric that may block the ventilation holes. The product should not be placed in an "in-built" installation unless all ventilation holes are provided with adequate ventilation.
11. The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock or injury.
12. Do not expose the Alarm Clock Radio near rain, moisture, liquids or dust. Do not store or use the Alarm Clock Radio anywhere near water, or where water drips and may come in contact with this product.
13. Unplug the Alarm Clock Radio in cases of electrical storms to protect against the possibility of power surges damaging the device.
14. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.
15. Be extremely careful when unpacking or relocating the Alarm Clock Radio. Ensure that the Alarm Clock Radio is not dropped, bumped or excessive force is not applied. Impact such as these can damage the product and its internal components.
16. The Alarm Clock Radio is not a toy. Supervise young children to ensure they do not play with this product. Do not allow children to insert foreign objects into the holes or slots on the unit.

---

## AFTER SALES SUPPORT

**☎ AUS** 1300 777 137 **EMAIL** [service@unclebills.com.au](mailto:service@unclebills.com.au)

# General Information and Safety Instructions (cont)

17. The Alarm Clock Radio uses 2x AAA 1.5V batteries (not included). Do not use any other type of battery. Do not leave batteries in the Alarm Clock Radio unused for extended periods of time. Always ensure when changing the batteries you do not mix old batteries with new batteries.
18. This Alarm Clock Radio is intended to be used indoors, for household use only. If using outdoors, please ensure that it is brought inside after use.
19. Do not expose the batteries to excessive heat, direct sunlight, open flames or any other heat sources.
20. Never operate the Alarm Clock Radio with wet hands, submerge under water or spill liquids into or onto the device. Do not place objects filled with liquids, such as vases or jugs on or near the Alarm Clock Radio.
21. Before cleaning, servicing, maintenance or moving the device please ensure the Alarm Clock Radio is switched off and disconnected from the power outlet. Never use liquid or abrasive cleaners on the Alarm Clock Radio, for more detailed instructions on how to clean the Alarm Clock Radio please see Cleaning and Maintenance on page 16 of this manual.
22. Do not place or store the Alarm Clock Radio near a hot burner (gas or electric), heat sources or near naked flame sources (such as candles, stoves or BBQ's).
23. Position the Alarm Clock Radio on a flat and stable surface.
24. If there is no battery in the back-up battery compartment, the time and alarm settings will be lost when the power cord is disconnected for cleaning, maintenance or storage. Reset the time and alarm settings after reconnecting the power cord (see Battery Backup for Alarm Clock Radio Memory on page 09 of this manual for more detailed instructions).

---

## AFTER SALES SUPPORT

 **AUS** 1300 777 137 **EMAIL** [service@unclebills.com.au](mailto:service@unclebills.com.au)



## Product Overview



- |                     |                        |
|---------------------|------------------------|
| 1. VOL+/AL2         | 8. TUN+/HOUR           |
| 2. VOL-/AL1         | 9. POWER               |
| 3. TIME/MEMORY/SCAN | 10. SLEEP              |
| 4. CH-/AL OFF       | 11. BAND/12/24H        |
| 5. CH+/AL MODE      | 12. SNOOZE             |
| 6. SPEAKER          | 13. LED DISPLAY SCREEN |
| 7. TUN-/MIN/DIMMER  |                        |

**Back of Unit (not pictured):** Radio Antenna and Power Cord.

### AFTER SALES SUPPORT

☎ AUS 1300 777 137 EMAIL [service@unclebills.com.au](mailto:service@unclebills.com.au)

# Product Overview (cont)

<b>POWER</b>	Press and hold to switch between clock mode and radio mode.  <b>IMPORTANT:</b> Pay attention to the active mode (clock/radio) when using the below functions. Each function will only work when in the correct mode.
<b>TIME</b>	In clock mode, press to adjust the time.
<b>MEMORY</b>	In radio mode, press to manually save active radio stations to preset memory.
<b>SCAN</b>	In radio mode, press and hold to automatically search for radio stations. Radio frequencies with a strong enough signal will automatically be saved as a preset station.
<b>CH-</b>	In radio mode, press repeatedly to access a previous preset station from P20 to P01
<b>AL OFF</b>	In clock mode, press to turn off the alarms sets.
<b>CH+</b>	In radio mode, press repeatedly to access a previous preset station from P20 to P01.
<b>AL MODE</b>	In alarm mode, press to access the alarm tone setting for alarm 1 (AL1) or alarm 2 (AL2).
<b>VOL-</b>	In radio mode, press to decrease the volume.
<b>AL1/AL2</b>	In clock mode, press to access and adjust alarm 1 or alarm 2.
<b>VOL+</b>	In radio mode, press to increase the volume.
<b>SNOOZE</b>	When an alarm is activated, press to snooze the alarm for 9 minutes.
<b>BAND</b>	In radio mode, press to switch between AM and FM.
<b>12/24H</b>	In clock mode, press to switch between 12 and 24 hour display.
<b>SLEEP</b>	In clock mode or radio mode, press to set the sleep timer.
<b>TUN-</b>	In clock mode, press repeatedly to change the brightness of the display. In radio mode, press to tune to lower frequency radio stations.
<b>MIN</b>	In clock setting mode, press to adjust the minutes to set the time.
<b>DIMMER</b>	In clock mode, press to adjust the brightness of the LED display.
<b>TUN+</b>	In radio mode, press to tune to higher frequency radio stations.
<b>HOUR</b>	In clock setting mode, press to adjust the hours to set the time.

Please see page 10-14 for detailed instructions on how to use the above product features.

## AFTER SALES SUPPORT

**☎ AUS 1300 777 137 EMAIL [service@unclebills.com.au](mailto:service@unclebills.com.au)**

## Getting Started

### Before First Use

Prior to using your Alarm Clock Radio, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this product. We recommend you keep the original packaging for storing your Alarm Clock Radio when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Alarm Clock Radio is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children so ensure all packaging materials are out of their reach.
2. Remove the twist-tie which is securing the electrical cord. Uncoil the cord and straighten it to remove any kinks. Do not use the product if the cord or plug is damaged, please call the After Sales Support line for further advice.
3. Remove the twist-tie which is securing the FM antenna on the back of the Alarm Clock Radio. Uncoil the wire and extended it to remove any kinks. Determine a way to install the FM antenna in a position to get the best reception. Radio frequency will vary depending on location.
4. Install 2x AAA batteries (not included) into the battery compartment. Open the battery compartment cover located on the bottom of the Alarm Clock Radio. Make sure you observe the proper polarity markings ("+" and "-") as indicated inside the battery compartment and insert 2x AAA batteries into the battery compartment. Reattach the cover of the battery compartment.
5. Place the Alarm Clock Radio on a flat, level surface. Make sure it is not subject to vibrations or movement.

---

#### AFTER SALES SUPPORT

**☎ AUS 1300 777 137** **EMAIL** [service@unclebills.com.au](mailto:service@unclebills.com.au)



## Instructions

### Battery Backup for Alarm Clock Radio Memory

The backup battery featured on the Alarm Clock Radio preserves the current time, alarm settings and the stored radio stations on the device to ensure these settings are not lost in the event of interrupted power, such as unplugging the power cord or in the event of a power failure. All settings will be stored in the memory, however once the power is restored, the time setting may require a slight adjustment to display an accurate time display.

If the power has been interrupted and there are no batteries installed, the LED display will blink "0:00" once the Alarm Clock Radio is turned back on. This indicates that the Alarm Clock Radio has been reset to factory settings, and you will need to reset the time, alarm settings and any saved radio stations that may have been previously stored to memory. To install the batteries into the Alarm Clock Radio:

1. Open the battery compartment cover located on the bottom of the Alarm Clock Radio. Make sure you observe the proper polarity markings ("+" and "-") as indicated inside the battery compartment and insert 2x AAA batteries into the battery compartment.
2. Reattach the cover of the battery compartment.

**NOTE:** Ensure the batteries are installed correctly before using the unit. Incorrectly installing the batteries can damage the unit.

**NOTE:** Batteries will only act as a backup memory, they will not supply power to the Alarm Clock Radio.

**NOTE:** If you do not plan to use the Alarm Clock Radio for an extended period of time, remove the batteries. Old or leaking batteries may damage to the unit and void the warranty.

**IMPORTANT:** Dispose of all used batteries at designated disposal points. Never dispose of batteries in a fire as this may cause an explosion or leakage of dangerous chemicals and fumes.

### Setting the Clock

When the Alarm Clock Radio is connected to a power outlet for the first time, the LED display will flash "0:00" indicating factory setting. To set the clock, the Alarm Clock Radio must be in clock mode (clock mode is active when the time is displayed and there are no illuminated indicator lights next to the AM and FM markings on the LED display screen).

---

#### AFTER SALES SUPPORT

☎ AUS 1300 777 137    EMAIL [service@unclebills.com.au](mailto:service@unclebills.com.au)

# Instructions (cont)

1. After first connecting the Alarm Clock Radio to power, press the **TIME** button once and “24H” will begin to flash.
2. Use the **12/24H** button to select either 12 hour or 24 hour clock format. Press the **TIME** button to confirm the selection. This selection will determine the format the clock is displayed in. For example 6.00pm will be displayed as “18:00” (24H) or “6:00” and the “PM” indicator light on the top left hand side of the LED display screen will be illuminated (12H).
3. Once the clock format is confirmed, the hour and minute selections will begin to flash to enable you to adjust the time on the Alarm Clock Radio.
4. Use the **HOUR** button to adjust the hour, and use the **MIN** button to adjust the minutes until the correct time is displayed. Press the **TIME** button to confirm.

**NOTE: Hours and minutes run forward only. If you pass a desired time, continue to press the MIN or HOUR buttons until the time cycles back around.**

## Listening to the Radio

To activate radio mode press and hold the **POWER** button. The radio frequency “87.5” will display on the LED display screen. Press the **VOL-** or **VOL+** button to adjust the volume to your desired level.

Press the **BAND** button to select the AM or FM radio band, the FM band is active when the “FM” indicator light on the LED display screen is illuminated. The AM band is active when the “AM” indicator light is illuminated.

You have two options to search for the radio stations; manually or automatically.

## Manually Searching Radio Stations

You can manually search stations by using the **TUN-** and **TUN+** buttons.

1. Press and hold the **POWER** button to enter radio mode.
2. Press the **BAND** button to choose AM or FM mode.
3. Press the **TUN-** or **TUN+** button to manually tune to a radio station. In AM mode, press the **TUN-** or **TUN+** button once and the radio will decrease or increase in increments of 9Hz. In FM mode, press the **TUN-** or **TUN+** button once and the radio will decrease or increase in increments of 0.1 MHz.
4. Alternatively press and hold the **TUN-** or **TUN+** button, the radio will start automatic scan until the next station available in your area is reached.
5. To save this station or frequency, press the **MEMORY** button to activate preset mode; the display will flash “P01”.

---

### AFTER SALES SUPPORT

**☎ AUS 1300 777 137    EMAIL [service@unclebills.com.au](mailto:service@unclebills.com.au)**

# Instructions (cont)

6. Press the **CH-** or **CH+** button to choose the program preset number from P01 and P20.
7. Press the **MEMORY** button to save the current frequency as preset 01 or to desired preset number.
8. Use the **VOL-** or **VOL+** button to adjust the radio volume to the desired level.  
U00 = Mute  
U01 = Lowest Volume  
U16 = Highest Volume

## Auto Searching Radio Stations

You can store up to 20 preset radio stations (P01-P20) to memory on the AM band and another 20 on the FM band.

To search for stations automatically,

1. Press and hold the **POWER** button to enter radio mode.
2. Press the **BAND** button to select the radio band AM or FM.
3. Press and hold the **SCAN** button until the Alarm Clock Radio starts the automatic scanning for the stations. The Alarm Clock Radio will automatically search for stations with a strong enough signal and store them under the empty preset channel numbers (P01, P02, P03...).
4. After the Alarm Clock Radio has scanned through the frequency or saved the maximum number of stations (20), it will stop the scan automatically. You can now access the saved stations by pressing the **CH-** or **CH+** button.
5. Use the **VOL-** or **VOL+** button to adjust the radio volume to the desired level.  
U00 = Mute  
U01 = Lowest Volume  
U16 = Highest Volume

**NOTE:** Stations with a weak signal can only be tuned in manually.

## Turning Off the Radio

While in radio mode, press the **POWER** button until the radio turns off and time is displayed on the LED screen (i.e., standby).

---

### AFTER SALES SUPPORT

 **AUS** 1300 777 137    **EMAIL** [service@unclebills.com.au](mailto:service@unclebills.com.au)

# Instructions (cont)

## Setting the Alarms

To set the alarms, the Alarm Clock Radio must be in clock mode. The clock mode is activated when the time is displayed and there are no illuminated indicator lights next to the AM and FM markings on the LED display screen. If you are in radio mode, press and hold the **POWER** button until you exit radio mode. To set the alarm time:

1. Press the **AL1** button once to set alarm 1. The LED display screen will flash "12:00" if 12H time is used, or "0:00" if 24H time is used.
2. Use the **HOURL** button to adjust the hour, and use the **MIN** button to adjust the minutes until the desired alarm time is displayed. Press the **AL1** button to confirm and the "AL1" indicator light will illuminate on the display screen.
3. Press the **AL OFF** button to turn the alarm off. The "AL1" indicator light on the LED display screen will flash, press the "AL1" button and then press **AL OFF** button once more to confirm. If another alarm is required the following day, make sure the alarm is reset and the indicator light next to "AL1" or "AL2" on the LED display screen is illuminated.

To set the alarm tone of the set alarm between buzzer, FM radio and AM radio:

1. Ensure the Alarm Clock Radio is in the clock mode. To switch from the radio mode to clock mode, press and hold the **POWER** button.
2. In the clock mode, press the **AL1** button for selecting alarm 1 or **AL2** for selecting alarm 2.
3. Press the **AL MODE** button repeatedly to cycle through selection of "bb" (beeping sound), FM radio and AM radio:
  - To set a beeping sound as the alarm tone, select "bb", and press **AL1** to confirm , or press the **AL2** button to confirm if it's for alarm 2.
  - To set a radio station as the alarm tone, select the AM or FM radio frequency flashing on the LED display screen. The AM or FM radio station will default to the station that is currently active in radio mode, so ensure that the desired radio station has been selected in radio mode before switching to clock mode to set a radio alarm. Press **AL1** to confirm, or press the **AL2** button to confirm if it's for alarm 2.

**NOTE:** You cannot adjust the radio station to set as an alarm tone while in clock mode. To change the radio station alarm tone return to radio mode, select the AM or FM radio frequency you wish to set as your alarm tone, and return to clock mode to set the alarm setting again.

---

### AFTER SALES SUPPORT

**☎ AUS** 1300 777 137 **EMAIL** service@unclebills.com.au

# Instructions (cont)

**IMPORTANT:** If a radio alarm tone has been set, the alarm will not activate if the radio is already on. So when using the radio as an alarm, ensure that the Alarm Clock Radio is in clock mode, before going to sleep.

**NOTE:** All steps above apply when setting a second alarm. Simply substitute AL1 with AL2.

## Snooze Function

Whenever the alarm (radio or buzzer) activates, it can be temporarily suspended for 9 minutes by pressing the **SNOOZE** button once.

The “AL1” or “AL2” indicator light will begin to flash to indicate that the snooze function has been activated. The alarm will then sound again automatically after 9 minutes.

To cancel the snooze function, press the **AL OFF** button. The snooze function will continue up to 10 times.

## LED Display Screen Dimmer

You are able to adjust the brightness of the LED display screen.

1. Firstly exit out of radio mode by pressing and holding the **POWER** button until the “AM” or “FM” indicator light disappears.
2. Press the **DIMMER** button once and the LED display will illuminate very bright.
3. Press the **DIMMER** button again and the LED display will turn off completely.
4. Press the **DIMMER** button a third time and the LED display will return to a moderate light intensity.

## Sleep Setting

Setting the Alarm Clock Radio on a sleep timer enables you to fall asleep listening to music and automatically shuts off after a selected period of time. You can program the sleep timer to play the radio for up to 2 hours.

Press the **SLEEP** button and the radio will turn on. The “SLEEP” indicator light will also illuminate, and the LED display screen will display “120” which refers to the total countdown in minutes until the sleep function is activated (i.e. if 120 is confirmed the radio will play for 120 minutes, then this the radio will turn off and enter sleep mode).

---

### AFTER SALES SUPPORT

**☎ AUS 1300 777 137    EMAIL [service@unclebills.com.au](mailto:service@unclebills.com.au)**



# Instructions (cont)

Press the **SLEEP** button to decrease the sleep countdown by 10 minute increments. Once you have selected your desired sleep time the Alarm Clock Radio will automatically save the number of minutes (you do not have to press another button to save the timer).

While the sleep function is activated you can change the radio station as desired (please see Listening to the Radio on page 10 of this manual for detailed instructions).

---

## AFTER SALES SUPPORT

 **AUS** 1300 777 137    **EMAIL** [service@unclebills.com.au](mailto:service@unclebills.com.au)

## Frequently Asked Questions

Symptom	Possible Problem	Solution
The device is not responding (no power)?	The device is not connected to a power outlet.	<ul style="list-style-type: none"><li>Connect the power plug to a power outlet.</li></ul>
There is no sound?	Volume is set too low.	<ul style="list-style-type: none"><li>Turn the volume up.</li></ul>
Can't access alarm mode?	The device is radio mode.	<ul style="list-style-type: none"><li>Exit radio mode by holding the <b>POWER</b> button down for three seconds.</li></ul>
Poor radio reception?	There is a weak radio signal or there maybe interference from other electrical equipment.	<ul style="list-style-type: none"><li>Reposition the antenna and the device for best possible reception.</li><li>Keep the device away from other electrical equipment where possible.</li></ul>
Can't access clock mode?	The device is in alarm mode.	<ul style="list-style-type: none"><li>Exit alarm mode by holding the <b>AL OFF</b> button, then press and hold the <b>POWER</b> button to switch between radio mode and clock mode.</li></ul>

## Other Useful Information

### Cleaning and Maintenance

1. Always disconnect the Alarm Clock Radio from the power outlet before cleaning.
2. The Alarm Clock Radio will require “dusting” to keep it clean. Use a standard duster or dry microfibre cloth to remove the dust from the device.
3. If the Alarm Clock Radio does become soiled with anything other than dust on the exterior, clean the device by wiping over the surface with a slightly damp cloth and then polish dry with a soft cloth.

**IMPORTANT:** Ensure that no moisture or liquids enter the Alarm Clock Radio, particularly around the front panel.

**NOTE:** Do not use detergents or abrasive cleaners, and do not allow moisture, water or other liquids to enter the Alarm Clock Radio.

**NOTE:** If there is no battery in the back-up battery compartment, the time and alarm settings will be lost when the power cord is disconnected for cleaning, maintenance or storage. Reset the time and alarm settings after reconnecting the power cord.

### Storage

- Before packing the Alarm Clock Radio away for storage, ensure it is clean and free of dust.
- We recommend storing the Alarm Clock Radio in its original carton to protect it from dust.
- Store the Alarm Clock Radio in a clean and dry place, out of children's reach.
- Do not place heavy objects on top during storage.

# Other Useful Information (cont)

## Features

- 0.6" LED Clock PLL AM/FM Radio
- Dual Alarm Function
- Snooze Repeat Alarm Every 9 Minutes
- Memory Store 40 Radio Stations (each band 20-AM/FM)

## Technical Specification

Power Input:	220-240V 50Hz
Power Consumption	4W
Input (For Clock Back-Up):	"AAA" Sized 1.5V x2 Batteries (not included)
Frequency:	FM 87.5-108 MHz / AM 522-1620 KHz

---

### AFTER SALES SUPPORT

 **AUS** 1300 777 137    **EMAIL** [service@unclebills.com.au](mailto:service@unclebills.com.au)

## Warranty Information

### **Congratulations on your purchase**

This Prinetti® Alarm Clock Radio is warranted to be free from defects in material and workmanship under normal use and service conditions for a period of 12 months from the date of purchase of this article. Evidence of unfair usage or incorrect adjustment by the owner will void this promise. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion.

The benefits conferred by this manufacturer's warranty are in addition to all other rights and remedies in respect of the appliance which the consumer has under the Australian Consumer Law.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **Conditions of Warranty**

All warranty coverage extends only to the original retail purchaser from the date of purchase. Please keep your receipt, tax invoice or other proof of purchase.

This warranty does not extend to any damage to an appliance caused by abuse, improper or abnormal usage, or repairs not provided by us or our Service Centre. Nor does this warranty extend to appliances used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning, heavy winds and by snow or ice).

### **Making A Warranty Claim**

In order to make a claim under this warranty please direct your enquiries to our Service Centre. You can contact them on our 1300 777 137 Phone Number or send mail to them at:

#### **Uncle Bill's Service Centre:**

2/24 Anderson Road, Smeaton Grange NSW 2567 – if mailing please include your contact details.

A service representative will then assist you in the appropriate action to be taken. For efficient processing of your enquiry please have proof of purchase, the date of purchase and the retailer name you purchased the item from, and the brand on the appliance. Photos of the appliance, and scans of receipts, may be requested to assist with your claim.

The service centre representative will assess the claim, if:

1) There is a minor fault, they can offer either a replacement spare part, replacement unit, repair or other suitable remedy;

---

#### **AFTER SALES SUPPORT**

☎ AUS 1300 777 137    EMAIL [service@unclebills.com.au](mailto:service@unclebills.com.au)



# Warranty Information (cont)

2) There is a major fault, they can offer a replacement, repair or suggest you return to the store you purchased it from for a full refund.

**PLEASE NOTE** – a request for compensation will need documentary evidence of the loss or damage suffered. It will also need to be evidenced that such a loss was a reasonably foreseeable result of a failure by Uncle Bill's to comply with a consumer guarantee under the Australian Consumer Law.

3) The appliance was damaged through abnormal use, no refund or repair can be offered. If the appliance needs to be returned and all the warranty criteria has been met, the consumer is to return the appliance to the place of purchase (along with their proof of purchase) and all costs involved with this will be the responsibility of the consumer.

Our sales and service centre has been set up to provide assembly assistance, technical support, replacement parts and accessories, and to efficiently handle all warranty related matters. Please note upon receiving your warranty claim our Service Centre will send, via post or email, a repair and refurbished goods or parts notice.

## SERVICE CENTRE

Contact details and hours of operation.

Phone 1300 777 137

Email [service@unclebills.com.au](mailto:service@unclebills.com.au)

9:00am – 4:30pm Monday to Friday (excluding Public Holidays)

9:00am – 3:00pm Saturday

This product is warranted and imported by:

Uncle Bill's (Australia) Pty Ltd

48B Egerton Street

Silverwater NSW 2128, Australia

Phone: 02 8799 3500

Item # EA0825

Model # GF-1207



---

## AFTER SALES SUPPORT

**AUS** 1300 777 137 **EMAIL** [service@unclebills.com.au](mailto:service@unclebills.com.au)

## Notes

# UNCLE BILLS

## **Prinetti Alarm Clock Radio**

Artwork Size: 148 x 210mm

Product Code #: EA0825

Model No #: GF-1207

## **UBA AMENDMENTS: M**

DATE: 11/07/2017

UB MODIFIED: Dylan (Ting Sticky)

## **A5**

**High Gloss Full Colour Printing**

**3mm Bleed**

## **Customer AMENDMENTS: NA**

DATE: 00/00/00

MODIFIED:



**C M Y K**

## **ARTWORK SIGN OFF**

\_\_\_\_\_  
SIGNATURE

\_\_\_\_\_  
SIGNATURE

**PRINTER FILE**



**DO NOT PRINT CATCHLINE**